

# **Climate Control**

**IMI** Heimeier

## Multibox Eclipse







# Flush-mounted individual room control with automatic flow limitation for floor heating systems



## **Multibox Eclipse**

The Multibox Eclipse is used for decentralized individual room temperature control or maximum limitation of the return temperature in the case of floor heating systems. The integrated flow limiter guarantee the requested flow is not exceeded. Equalization in the event of out-of-true installation, offsetting up to 6° on each side. Cover with concealed screw fastening. Flexible fitting for all wall structures, 30 mm depth compensation.





## **Key features**

Integrated flow limiter Eliminates over flows

Simple adjustment of the flow to various heating loads

For out-of-true installation offsetting up to 6° on each side

Adjustable fitting for all wall structures 30 mm depth compensation

## **Technical description**

## Applications:

Floor heating systems, wall heating systems, combined floor/radiator heating systems

## **Functions:**

## Multibox Eclipse K:

Individual room temperature control, Automatic flow limiting, Shut-off,

Venting

## Multibox Eclipse RTL:

Maximum limitation of the return temperature,

Automatic flow limiting,

Shut-off,

Venting

## Multibox Eclipse K-RTL:

Individual room temperature control, Maximum limitation of the return temperature,

Automatic flow limiting,

Shut-off,

Venting

## **Dimensions:**

Valve body DN 15. The flush box has an overall depth of 60 mm.

Flexible mounting thanks to variable spacing between flush box and cover of up to 30 mm.

The cover can compensate for slanted mounting of the flush box of up to 6° on each side.

See also Dimensions.

## Pressure class:

PN 10

## Setting range:

Thermostatic head K: 6°C to 28°C Return temperature limiter RTL: 0°C to 50°C

## Temperature:

Max. working temperature: 90°C Min. working temperature: -10°C For all Multibox models, ensure that the system supply temperature is suitable for setting up the floor heating system. See also Information!

## Flow range:

The flow can be stepless pre-set within the range: 10-150 l/h.

Factory setting: Commissioning

#### Differential pressure ( $\Delta pv$ ):

Max. differential pressure: 60 kPa (<30 dB(A)) Min. differential pressure: 10 – 100 l/h = 10 kPa 100 – 150 l/h = 15 kPa

#### Material:

Valve body: Corrosion resistant

Gunmetal

O-rings: EPDM rubber
Valve disc: EPDM rubber
Return spring: Stainless steel
Valve insert: Brass, PPS
(polyphenylsulphide) and SPS
(syndiotactic polystyrene)
Spindle: Niro-steel spindle with double
O-ring sealing. The outer O-ring can be
replaced under pressure.
Plastic parts of ABS and PA.
Sensor element: Thermostatic head
K with liquid filled sensor. Return

temperature limiter (RTL) filled with an

expansible medium.

## Surface treatment:

Cover and visible graduation cap in white RAL 9016.

## Marking:

THE, flow direction arrows, II+-Designation.

## Pipe connection:

Pipe-side G 3/4 adaptor with cone suitable for compression fittings for plastic, copper, precision steel and multi-layer pip




## Construction

## Multibox Eclipse K

#### **Multibox Eclipse RTL**

#### Multibox Eclipse K-RTL

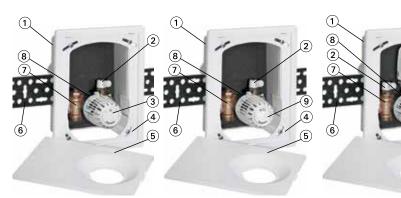

- 1. Flush box
- 2. Venting valve
- 3. Thermostatic head K
- 4. Frame
- 5. Cover plate
- 6. Fixing bar
- 7. Valve chamber of corrosion resistant gunmetal
- 8. Thermostatic insert with flow limiter
- 9. Return temperature limiter (RTL)

## **Application**

#### Multibox Eclipse K

Multibox Eclipse K is used for the individual room temperature control of, for instance, floor heating systems in association with low temperature heating systems. Multibox Eclipse K is also used in wall heating systems.

#### **Multibox Eclipse RTL**

Multibox Eclipse RTL is used for maximum limitation of the return temperature with, for instance, combined floor/radiator heating systems for temperature control of floor areas. Only the return temperature is controlled.

## Multibox Eclipse K-RTL

Multibox Eclipse RTL is used for maximum limitation of the return temperature with, for instance, combined floor/radiator heating systems for temperature control of floor areas. Only the return temperature is controlled.

## Sample application


With all Multibox Eclipses, the maximum necessary flow to the individual heating circuits is set directly on the flow limiter, thereby performing automatic flow limitation in a single turn. The adjusted flow will never be exceeded. Even if there is an oversupply of pressure due to load changes in the system - for example other valves closing or during morning start up, the flow will automatically be adjusted to the set value. In the case of combined floor-radiator heating systems, the following valves with automatic flow limitation (AFC) should be used on the terminal unit together with a Multibox Eclipse:

- Eclipse thermostat valve substructures,
- Multilux 4-Eclipse-Set for bathroom hot-water radiators and valve radiators.

## Noise behaviour

To ensure low-noise performance, the following conditions must be met:

- The differential pressure above Eclipse should not exceed 60 kPa = 600 mbar = 0,6 bar (<30 dB(A)).
- Flow must be correctly adjusted.
- The system must be completely deaerated.

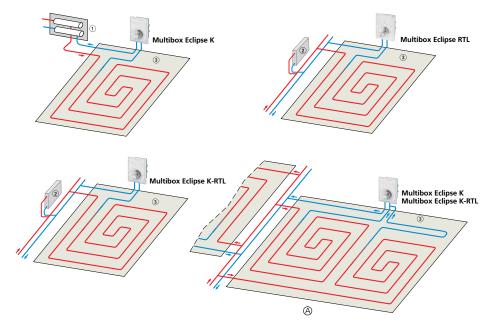

- 1. Manifold
- 2. Radiator with Eclipse
- 3. Floor heating area
- A. Floor heating without central manifold with e.g. two equally long heating circuits per room and Multibox (see Planning Information).



## **Function**

## Multibox Eclipse K

From the control aspect, the thermostatic valve integrated in Multibox Eclipse K is a constant proportional controller (P-controller) without any auxiliary power. It does not need any electrical connection or other outside power source.

The change of the room air temperature (controlled variable) is proportional to the change of the valve lift (correcting variable). A rise in the room air temperature e.g. from the sun's rays, results in an expansion of the liquid in the temperature sensor and it acts on the bellows.

By means of the valve spindle, this cuts back on the supply of water in the floor heating circuit. The procedure is reversed given a falling room air temperature.

At the flow controller, the adjusted flow [I/h] will never be exceeded. Even if there is an oversupply of pressure due to load changes in the system - for example other valves closing or during morning start up - Multibox Eclipse K will guarantee the requested flow.

## **Multibox Eclipse RTL**

From the control aspect, the return temperature limiter integrated in Multibox Eclipse RTL is a constant proportional controller (P-controller) without any auxiliary power. It does not need any electrical connection or other outside power source. The temperature change of the fluid flowing through (controlled variable) is proportional to the change of the valve lift (correcting variable) and is transferred to the sensor by means of thermal conduction. Any rise in the return temperature due to, for instance, to lowered heating output of the floor heating system as a result of outside thermal effects causes the substance in the temperature sensor to expand and act on the diaphragm plunger. By means of the valve spindle, this cuts back on the supply of water in the floor heating circuit. The procedure is reversed given a falling fluid temperature.

The valve opens when the set limiting figure is exceeded. At the flow controller, the adjusted flow [l/h] will never be exceeded. Even if there is an oversupply of pressure due to load changes in the system - for example other valves closing or during morning start up - Multibox Eclipse RTL will guarantee the requested flow.

## Multibox Eclipse K-RTL

From the control aspect, the thermostatic valve integrated in Multibox Eclipse K-RTL is a constant proportional controller (P-controller) without any auxiliary power. It does not need any electrical connection or other outside power source. The change of the room air temperature (controlled variable) is proportional to the change of the valve lift (correcting variable). A rise in the room air temperature e.g. from the sun's rays, results in an expansion of the liquid in the temperature sensor of the thermostatic head and it acts on the bellows. By means of the valve spindle, this cuts back on the supply of water in the floor heating circuit. The procedure is reversed given a falling room air temperature.

Multibox Eclipse K-RTL is additionally provided with a return temperature limiter (RTL) which stops the set return temperature from being exceeded. The valve opens when the set limiting figure is exceeded.

At the flow controller, the adjusted flow [I/h] will never be exceeded. Even if there is an oversupply of pressure due to load changes in the system - for example other valves closing or during morning start up - Multibox Eclipse K-RTL will guarantee the requested flow.

## **Temperature setting**

## Thermostatic head K

Cue number	*	1	)	2	3	4	5
Room temperature [°C]	6	12	14	16	20	24	28

## Return temperature limiter (RTL)

Cue number	0	1	2	3	4	5
Return temperature [°C]	0	10	20	30	40	50

(Opening temperature)




## **Operation**

## Flow setting

Stepless setting between 1 to 15 (10 to 150 l/h). The setting is changed using a special setting key (article No. 3930-02.142) or an 11 mm end wrench, to ensure tamper proof setting.

- Place the setting key on the valve insert.
- Turn the setting tool so that desired setting value is pointing at the index\* of the valve body (see fig.).
- Remove the key or 11 mm end wrench. The valve is now set.

## Front-end and lateral visibility

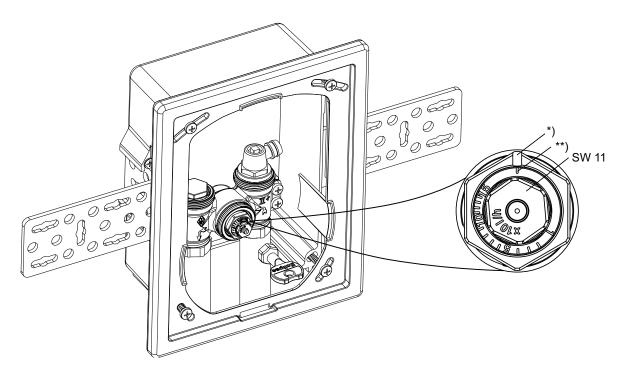

<sup>\*)</sup> Index

Setting	1	I	I	I	5	I	I	I	I	10	I	I	I	I	15
l/h	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150

P-band [xp] max. 2 K.

P-band [xp] max. 1 K up to 90 l/h.

<sup>\*\*)</sup> Commissioning setting



## **Setting table**

## Setting values with different heating performances and system differential temperatures

Ġ [W]	200	250	300	400	200	009	700	800	006	1000	1200	1400	1600	1800	2000	2200	2400	2600
∆t [K]	l/h																	
5	3	4	5	7	9	10	12	14										
8	2	3	3	4	5	7	8	9	10	11	13	15						
10	2	2	3	3	4	5	6	7	8	9	10	12	14					
15	1	1	2	2	3	3	4	5	5	6	7	8	9	10	12	13	14	15

 $\Delta p \text{ min.} \quad 10 - 100 \text{ I/h} = 10 \text{ kPa}$ 

Δp min. 100 - 150 l/h = 15 kPa

Q = Heating performance


 $\Delta t$  = System differential temperature

 $\Delta p$  = Differential pressure


## Sample:

Q = 1000 W,  $\Delta t$  = 8 K Setting value: 11 (=110 l/h)

## Diagram

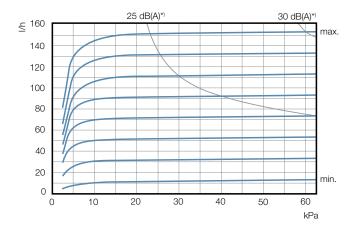

## Lowest flow tolerances

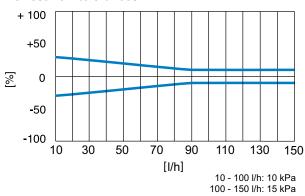



## Information

#### **Planning notes**

- For all Multibox models, ensure that the system supply temperature is suitable for setting up the floor heating system.
- All Multibox models are to be connected to the return pipe at the end of the floor heating circuit. Heed direction of flow (see Examples of use).
- Depending on piping pressure loss, all Multibox models are suitable for heating areas up to approx. 20 m<sup>2</sup>.
- The length of 12 mm internal diameter pipe in any heating circuit should not exeed 100 m.
- With heating areas >20 m² and/or pipe lengths >100 m, a T-piece, for instance, should be used to connect two equally long heating circuits to the Multibox. (see Examples of use).
- To ensure low-noise system operation, differential pressure over the valve should not exceed 0.6 bar.
- The floor heating pipe is to be laid spirally in the flooring screed (see Examples of use).
- The set value of the RTL should not be below ambient temperature otherwise it will not open.

#### Thermal fluid

To stop any damage and scale in hot water heating systems, the composition of the thermal fluid is to conform to VDI Directive 2035. For industrial and longdistance energy systems, see applicable codes VdTÜV and 1466/AGFW FW 510. Mineral oil in the thermal fluid and/or all kinds of lubricants containing mineral oil lead to considerable swelling and, in most cases, to the failure of EPDM seals.

When using nitrite-free antifreeze and anti-corrosive based on ethylene glycol, technical advice – especially on additive concentration – is to be taken from the anti-freeze/anti-corrosive manufacturer's documentation.

## **Functional heating**

Carry out functional heating of heating screed conforming to standards in keeping with EN 1264-4.

#### Earliest start for functional heating:

- Cement screed: 21 days after laying
- Anhydrite screed 7 days after laying

Begin 20 °C - 25 °C flow temperature and maintain for 3 days. Then set maximum design temperature and maintain for 4 days. Flow temperature can be regulated by controlling the heat generator. Turn the protective cap anticlockwise to open valve or turn RTL head to Position 5.

 
Refer to the screed manufacturer's information!

## Do not exceed maximum floor temperature at the heating pipes:

- Cement and anhydrite screed: 55 °C
- Poured asphalt screed: 45 °C
- according to screed manufacturer's technical advice!



## **Articles**



## Multibox Eclipse K

with thermostatic valve

 
Colour	EAN	Article No
Cover and thermostatic head K white RAL 9016	4024052902415	9318-00.800



## **Multibox Eclipse RTL**

with return temperature limiter (RTL)

Colour	EAN	Article No
Cover and RTL thermostatic head white RAL 9016	4024052902514	9319-00.800



## **Multibox Eclipse K-RTL**

with thermostatic valve and return temperature limiter (RTL)

Colour	EAN	Article No
Cover and thermostatic head K white RAL 9016	4024052902316	9317-00.800

## **Accessories**



## Setting key

for Eclipse. Color orange.

	EAN	Article No
	4024052937714	3930-02.142



## **Compression fitting**

for copper or precision steel pipe according to DIN EN 1057/10305-1/2. Connection external thread G 3/4 according to DIN EN 16313 (Eurocone). Metal-to-metal joint. Brass nickel-plated. With a pipe wall thickness of 0.8-1 mm insert supporting sleeves. Heed pipe manufacturer's technical advice.

Ø Pipe	EAN	Article No
12	4024052214211	3831-12.351
15	4024052214617	3831-15.351
16	4024052214914	3831-16.351
18	4024052215218	3831-18.351



## Support sleeve

for copper or precision steel pipe with a 1 mm wall thickness. Brass.

Ø Pipe	L	EAN	Article No
12	25,0	4024052127016	1300-12.170
15	26,0	4024052127917	1300-15.170
16	26,3	4024052128419	1300-16.170
18	26,8	4024052128815	1300-18.170





## **Compression fitting**

for copper or precision steel pipe according to DIN EN 1057/10305-1/2. Connection external thread G 3/4 according to DIN EN 16313 (Eurocone). Soft sealed, max. 95°C. Nickel-plated brass.

Ø Pipe	EAN	Article No
15	4024052515851	1313-15.351
18	4024052516056	1313-18.351





## **Compression fitting**

for plastic pipe according to DIN 4726, ISO 10508. PE-X: DIN 16892/16893, EN ISO 15875; PB: DIN 16968/16969. Connection external thread G 3/4 according to DIN EN 16313 (Eurocone). Nickel plated brass.

Ø Pipe	EAN	Article No
14x2	4024052134618	1311-14.351
16x2	4024052134816	1311-16.351
17x2	4024052134915	1311-17.351
18x2	4024052135110	1311-18.351
20x2	4024052135318	1311-20 351







for Alu/PEX multi-layer pipe according to DIN 16836.

Connection external thread G 3/4 according to DIN EN 16313 (Eurocone). Nickel-plated brass.

Ø Pipe	EAN	Article No
16x2		1331-16.351





when maximum installation depth exceeded.

L	EAN	Article No
Brass nickel-plated		
20	4024052528813	2201-20.700
30	4024052528912	2201-30.700
Plastic, black		
15	4024052553310	2001-15.700
30	4024052165018	2002-30.700



## Spindle extension for RTL thermostatic head with Multibox Eclipse RTL

when maximum installation depth exceeded.

Brass nickel-plated.

L	EAN	Article No
20	4024052500215	9153-20.700



## Replacement thermostatic insert

with automatic flow limiter for Eclipse. EAN Article No 4024052940912 3930-02.300





## RTL Thermostatic head especially for Multibox Eclipse RTL for reverse-flow temperature control White RAL 9016.

	EAN	Article No
0 °C - 50 °C	4024052595112	6510-00.500





RTL insert and RTL thermostatic head specially for converting Multibox K/ Multibox Eclipse K into Multibox K-RTL/ Multibox Eclipse K-RTL.

	EAN	Article No
RTL insert	4024052497812	9303-00.300
RTL thermostatic head	4024052275311	6500-00.500





## Frame and cover plate


Replacement for Multibox K/Multibox Eclipse K, Multibox RTL/Multibox Eclipse RTL and Multibox K-RTL/Multibox Eclipse K-RTL.

Colour	EAN	Article No
White RAL 9016	4024052489671	9300-00.800




## **Dimensions**

## **Multibox Eclipse K**

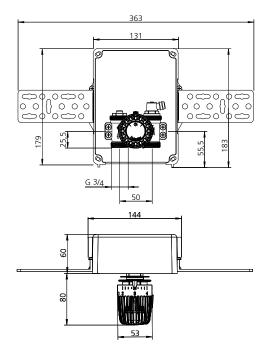

## **Multibox Eclipse RTL**

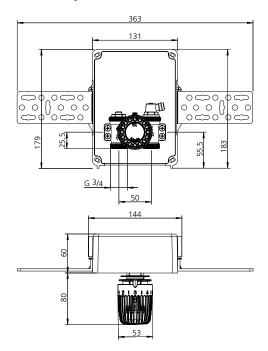

## **Multibox Eclipse K-RTL**

