

Climate  
Control

IMI TA

# STAF-SG – ANSI flanges



**Balancing valves**  
DN 20-400

## STAF-SG – ANSI flanges

A flanged, ductile iron balancing valve that delivers accurate hydronic performance in an impressive range of applications. The STAF-SG is ideal for use mainly on the secondary side in heating and cooling systems.

### Key features

#### Handwheel

Equipped with a digital read-out, the handwheel ensures accurate and straightforward balancing.

Handwheel for DN 65-150 with side reading makes the read-out easy from any angle.

#### Accurate and precise

Provides high accuracy of measurement.

#### Self-sealing measuring points

For simple, accurate balancing.

#### Positive shut-off function

For easy maintenance.



### Technical description

#### Application:

Heating (not steam) and cooling systems

#### Functions:

Balancing  
 Presetting  
 Measuring  
 Shut-off (The balancing cone for valves DN 100-400 is pressure released).

#### Dimensions:

DN 20-400

#### Pressure class:

Class 150

#### Temperature:

Max. working temperature: 120°C  
 Min. working temperature: -10°C

#### Media:

Water or neutral fluids, water-glycol mixtures (0-57%).

#### Material:

Body: Ductile iron, EN-GJS-400-15 (~ ASTM A536 Grade 60-40-18, ISO 1083 Grade 400-15).

DN 20-150:  
 Bonnet, cone and spindle of AMETAL®.  
 DN 200-300:  
 Bonnet and cone of ductile iron EN-GJS-400-15, and spindle of AMETAL®.  
 DN 350-400:  
 Bonnet of ductile iron EN-GJS-400-15, cone of silicon brass CuZn16Si4-C (EN 1982) and gunmetal CuSn5Zn5Pb5 (EN 1982), and spindle of AMETAL®.

Cone DN 100-400: PTFE coated.

Seals: EPDM.  
 Slip washer: PTFE.  
 Bonnet bolts: Surface treated steel.  
 Measuring points: AMETAL® and EPDM.  
 Handwheel: DN 20-50 polyamide and TPE, DN 65-150 polyamide, DN 200-400 aluminium.

AMETAL® is the dezincification resistant alloy of IMI.

#### Surface treatment:

DN 20-200: Epoxy painting.  
 DN 250-400: Duasolid painting.

#### Marking:

DN 20-50: TA, PN, DN (mm), 400-15 (material) and flow direction arrow.  
 DN 65-400: TA, Class 150, size (inch), 60-40-18 (material), casting date and flow direction arrow.  
 CE-marking:  
 CE: STAF-SG (Class 150) DN 65-150.  
 CE 0409\*: STAF-SG (Class 150) DN 200-300.  
 \*) Notified body.

#### Flanges:

DN 20-50: ISO 7005-2 and EN 1092-2.  
 Bolt circle according to Class 150 ASME/ANSI B16.42.  
 DN 65-400: Class 150 ASME/ANSI B16.42 (~ PN 20 according to ISO 7005-2).

#### Face to face length:

ISO 5752 series 1, EN 558-1 series 1.

## Measuring points

Measuring points are self-sealed. Remove the cap and insert the probe through the seal.

## Sizing

When  $\Delta p$  and the design flow are known, use the formula to calculate the Kv value or use the diagram.

$$Kv = 0,01 \frac{q}{\sqrt{\Delta p}} \quad q \text{ l/h, } \Delta p \text{ kPa}$$

$$Kv = 36 \frac{q}{\sqrt{\Delta p}} \quad q \text{ l/s, } \Delta p \text{ kPa}$$


## Measuring accuracy

The handwheel zero position is calibrated and must not be changed.

### Deviation of flow at different settings


The curve holds for valves with the correct flow direction, straight pipe distances (Fig. 1) and normal pipe fittings.

#### DN 20-50

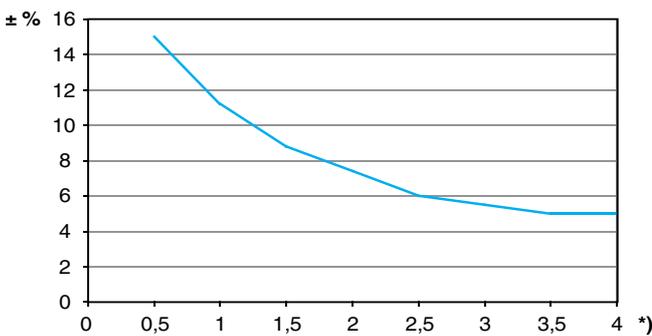


\*) Setting, No. of turns.

#### DN 65-400

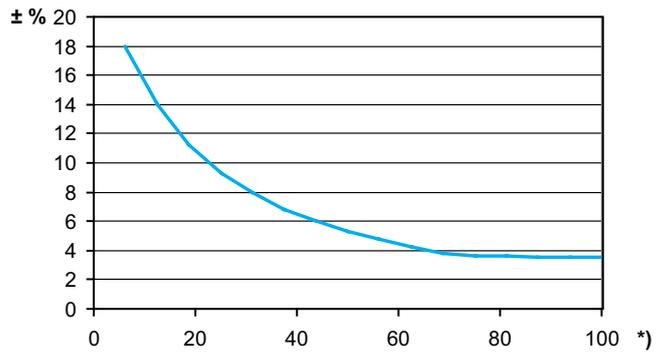


\*) Setting (%) of fully open valve.

Fig. 1

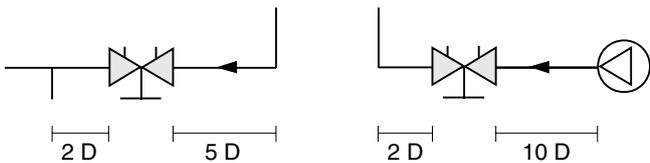

D = Valve DN

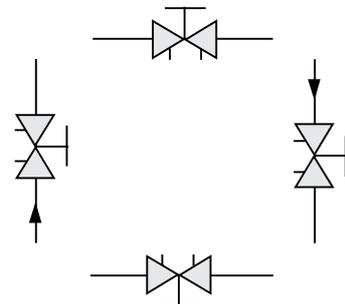

## Correction factors

The flow calculations are valid for water (+20°C). For other liquids with approximately the same viscosity as water ( $\leq 20 \text{ cSt} = 3^\circ \text{E} = 100 \text{ S.U.}$ ), it is only necessary to compensate for the specific density. However, at low temperatures, the viscosity increases and laminar flow may occur in the valves. This causes a flow deviation that increases with small valves, low settings and low differential pressures. Correction for this deviation can be made with the software HySelect or directly in our balancing instruments.

## Kv values

### DN 20-50

Turns	DN 20	DN 25	DN 32	DN 40	DN 50
0.5	0,511	0,60	1,14	1,75	2,56
1	0,757	1,03	1,90	3,30	4,2
1.5	1,19	2,10	3,10	4,60	7,2
2	1,90	3,62	4,66	6,10	11,7
2.5	2,80	5,30	7,10	8,80	16,2
3	3,87	6,90	9,50	12,6	21,5
3.5	4,75	8,00	11,8	16,0	26,5
4	5,70	8,70	14,2	19,2	33

### DN 65-150

Turns	DN 65	DN 80	DN 100	DN 125	DN 150
0.5	1,02	2,33	2,54	5,99	5,39
1	2,39	4,25	5,59	10,9	13,3
1.5	3,77	6,20	8,64	15,7	22,8
2	5,18	8,47	11,5	21,5	41
2.5	6,52	11,4	15,5	29,1	65,7
3	8,18	15	26,2	37,5	92,6
3.5	11,6	20,8	42,8	54,2	127
4	18,6	29,9	66	85,2	176
4.5	29,9	43,3	91,7	118	214
5	39,6	57,5	108	148	249
5.5	47,9	69,6	119	168	281
6	57,5	81,2	136	198	307
6.5	66,3	92,8	151	232	332
7	74,2	104	164	255	353
7.5	80	114	174	275	374
8	85	123	185	294	400

**NOTE:** In softwares (HySelect, HyTools) and balancing instrument (TA-SCOPE) the STAF/STAF-SG, DN 65-150, is named STAF\* resp. STAF-SG\*.

**DN 200-400**

Turns	DN 200	DN 250	DN 300	DN 350	DN 400
0.5	-	-	-	-	-
1	-	-	-	-	-
1.5	-	-	-	-	-
2	40	90	-	-	-
2.5	50	110	-	-	-
3	65	140	150	109	125
3.5	90	195	230	129	148
4	120	255	300	148	171
4.5	165	320	370	170	208
5	225	385	450	207	264
5.5	285	445	535	254	326
6	340	500	620	302	386
6.5	400	545	690	352	449
7	435	590	750	404	515
7.5	470	660	815	471	590
8	515	725	890	556	680
9	595	820	970	784	894
10	650	940	1040	957	1140
11	710	1050	1120	1100	1250
12	765	1185	1200	1260	1400
13	-	-	1320	1420	1560
14	-	-	1370	1610	1730
15	-	-	1400	1760	1940
16	-	-	1450	1870	2140
17	-	-	-	1960	2280
18	-	-	-	2040	2410
19	-	-	-	2130	2530
20	-	-	-	2200	2630
21	-	-	-	-	2710
22	-	-	-	-	2780

## Setting

It is possible to read the set value on the handwheel.

The number of turns between the fully open and closed positions is:

- 4 turns for DN 20-50,
- 8 turns for DN 65-150,
- 12 turns for DN 200-250,
- 16 turns for DN 300,
- 20 turns for DN 350 and
- 22 turns for DN 400.


Initial setting of a valve for a particular pressure drop, e.g. corresponding to 2.3 turns on the graph, is carried out as follows:

1. Close the valve fully (Fig. 1)
2. Open the valve to 2.3 turns (Fig. 2).
3. Using an Allen key, turn the inner spindle clockwise until the stop position.
4. The valve is now set.


To check the setting of a valve, first close the valve, then open it to the stop position; the indicator then shows the presetting number, in this case 2.3 (Fig. 2).

### Example DN 65


**Fig. 1** Valve closed

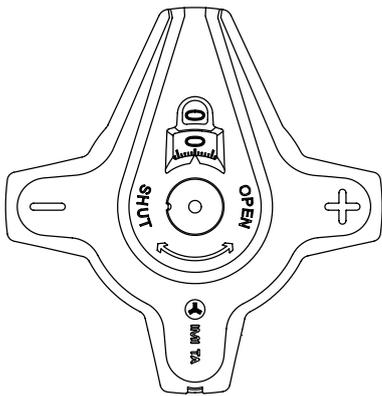

**Fig. 2a** The valve is set at 2.3

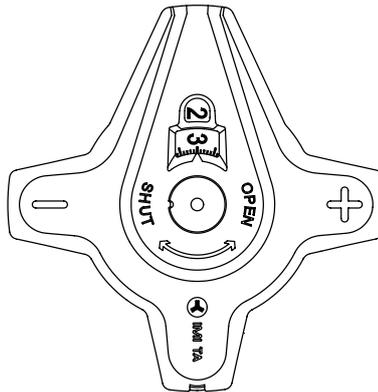


**Fig. 2b** Setting 2.3 side view

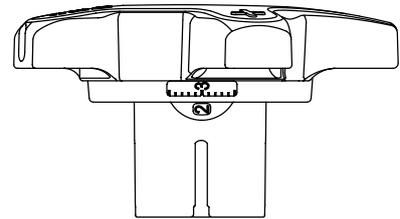


### Example DN 200

**Fig. 1** Valve closed

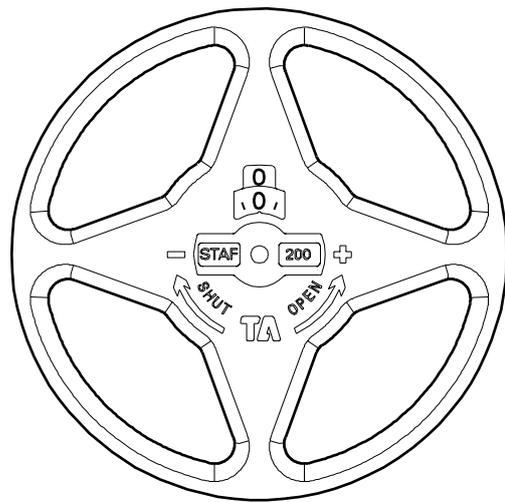


**Fig. 2** The valve is set at 2.3

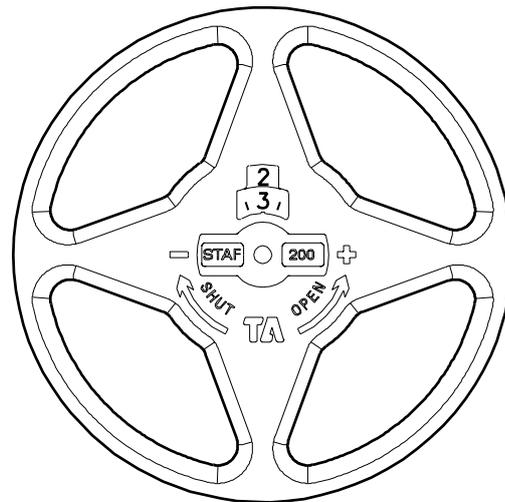


## Change of handwheel position DN 65-150

The handwheel on DN 65-150 have a reading on the side as well as on the top of the handwheel to make it easier to read. The handwheel can be rotated to have the side view reading in three different positions.

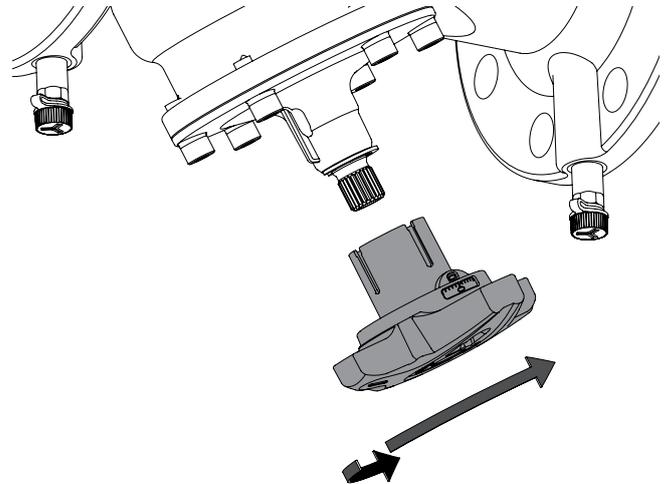

## Spindle extension DN 65-150

The spindle can be extended on DN 65-150 to make more room for insulation if needed. An extension kit is included with the DN 65-150 valves.

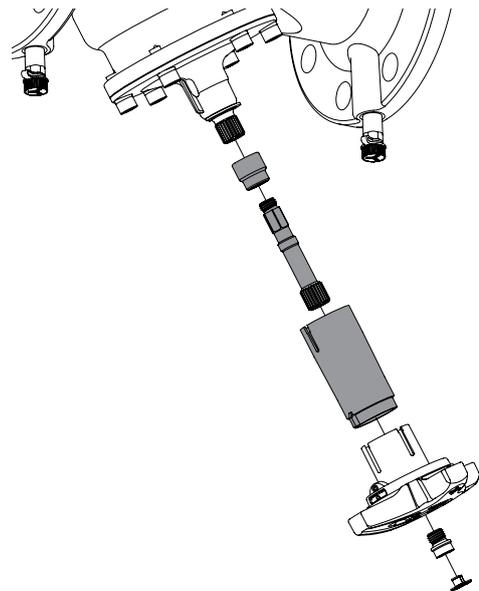

## Diagram example

### Wanted:

Presetting for DN 25 at a desired flow rate of 1.8 m<sup>3</sup>/h and a pressure drop of 20 kPa.

### Solution:

Draw a straight line joining 1.8 m<sup>3</sup>/h and 20 kPa. This gives Kv=4.


Now draw a horizontal line from Kv=4.

This intersects the bar for DN 25 at the desired presetting of 2.1 turns.

### NOTE:


If the flow rate falls outside the scale in the diagram, the reading can be made as follows: Starting with the example above, we get 20 kPa, Kv = 4 and flowrate 1.8 m<sup>3</sup>/h. At 20 kPa and Kv = 0.4 we get the flow-rate 0.18 m<sup>3</sup>/h, and at Kv = 40, we get 18 m<sup>3</sup>/h. That is, for a given pressure drop, it is possible to read 10 times or 0.1 times the flow and Kv-values.

### Diagram DN 20-50

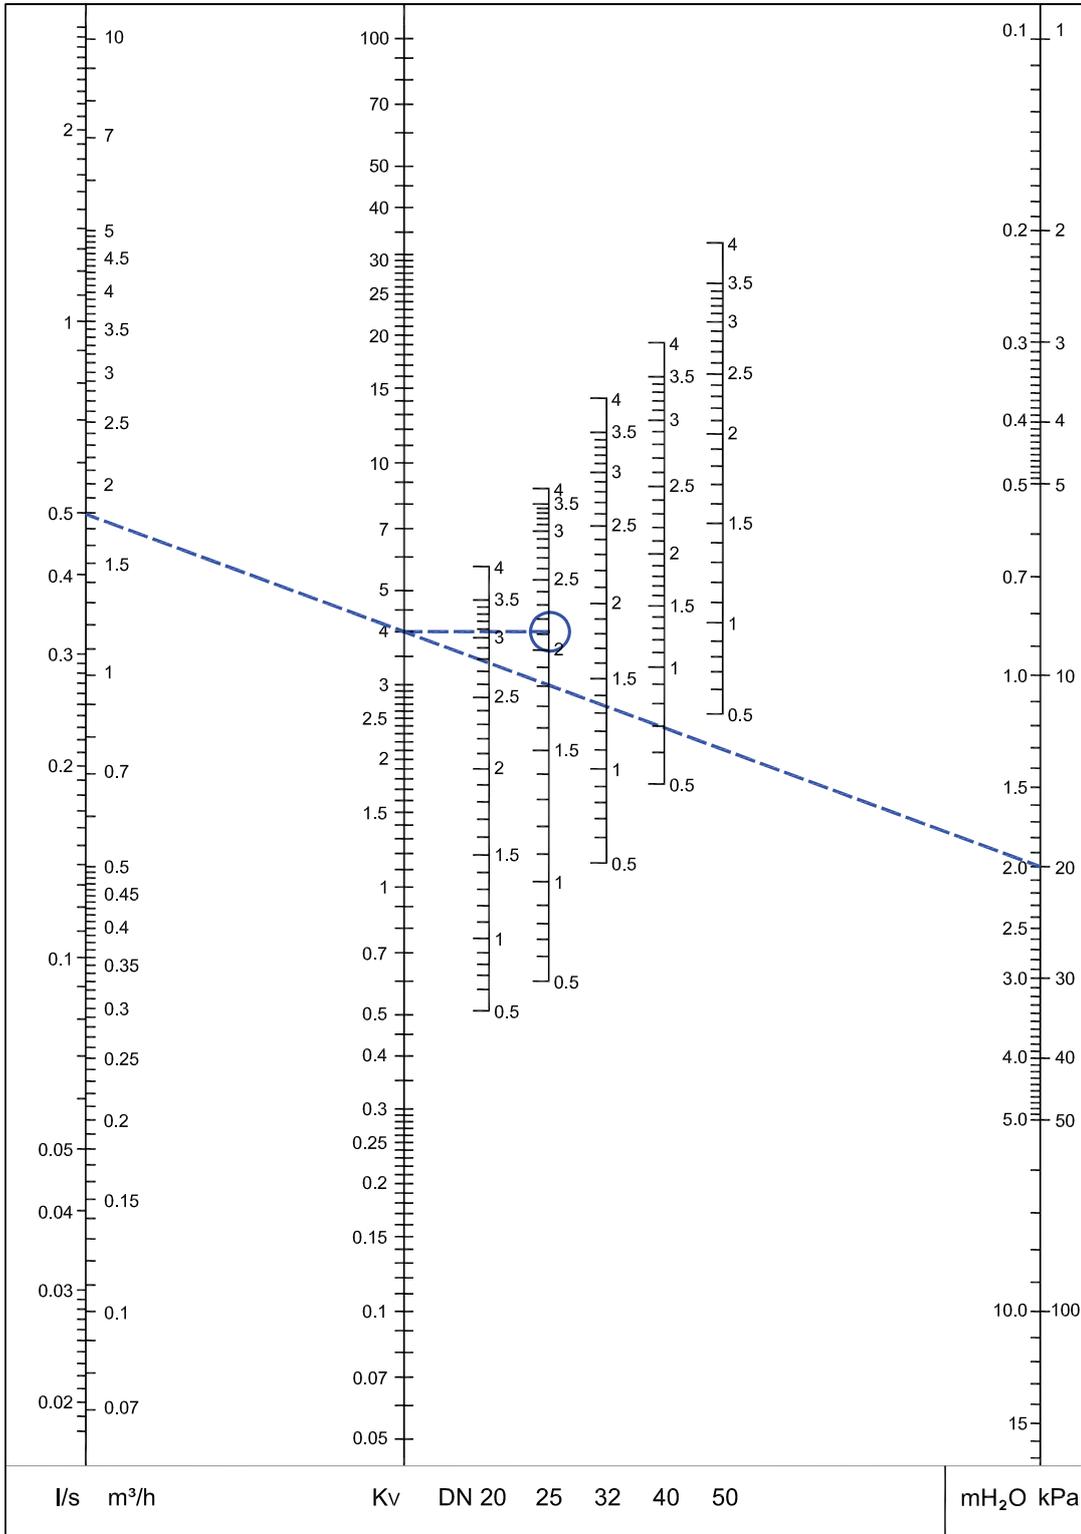

Recommended area: See Fig. 3 under "Measuring accuracy".


### Diagram DN 65-150

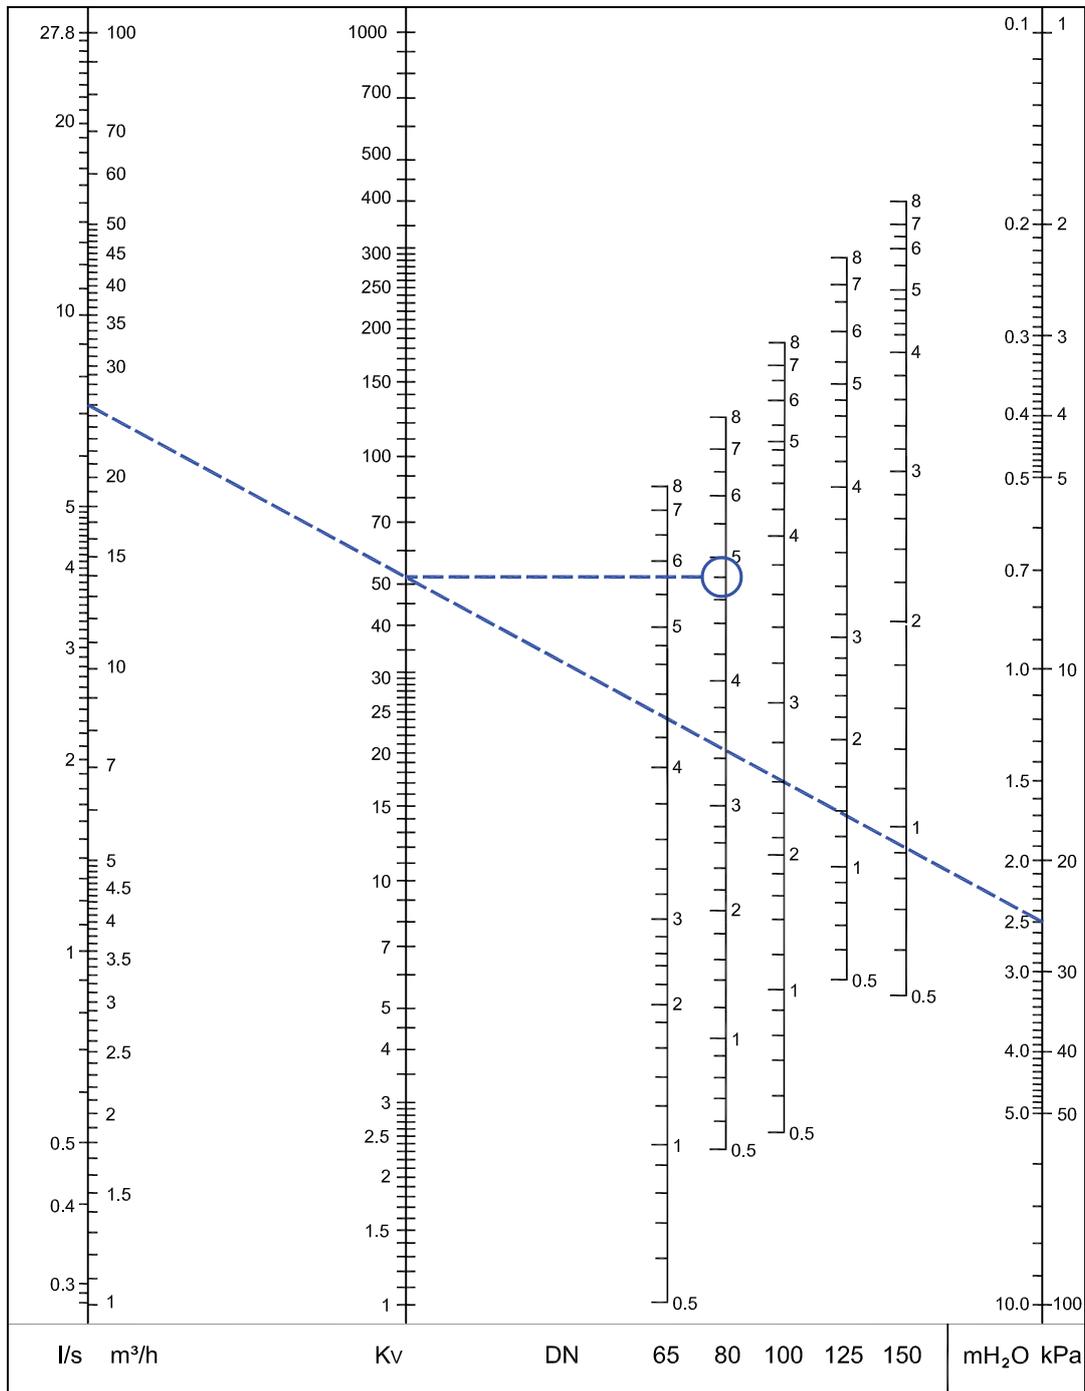

Recommended area: See Fig. 3 under “Measuring accuracy”.


**NOTE:** In softwares (HySelect, HyTools) and balancing instrument (TA-SCOPE) the STAF/STAF-SG, DN 65-150, is named STAF\* resp. STAF-SG\*.

### Diagram DN 200-400

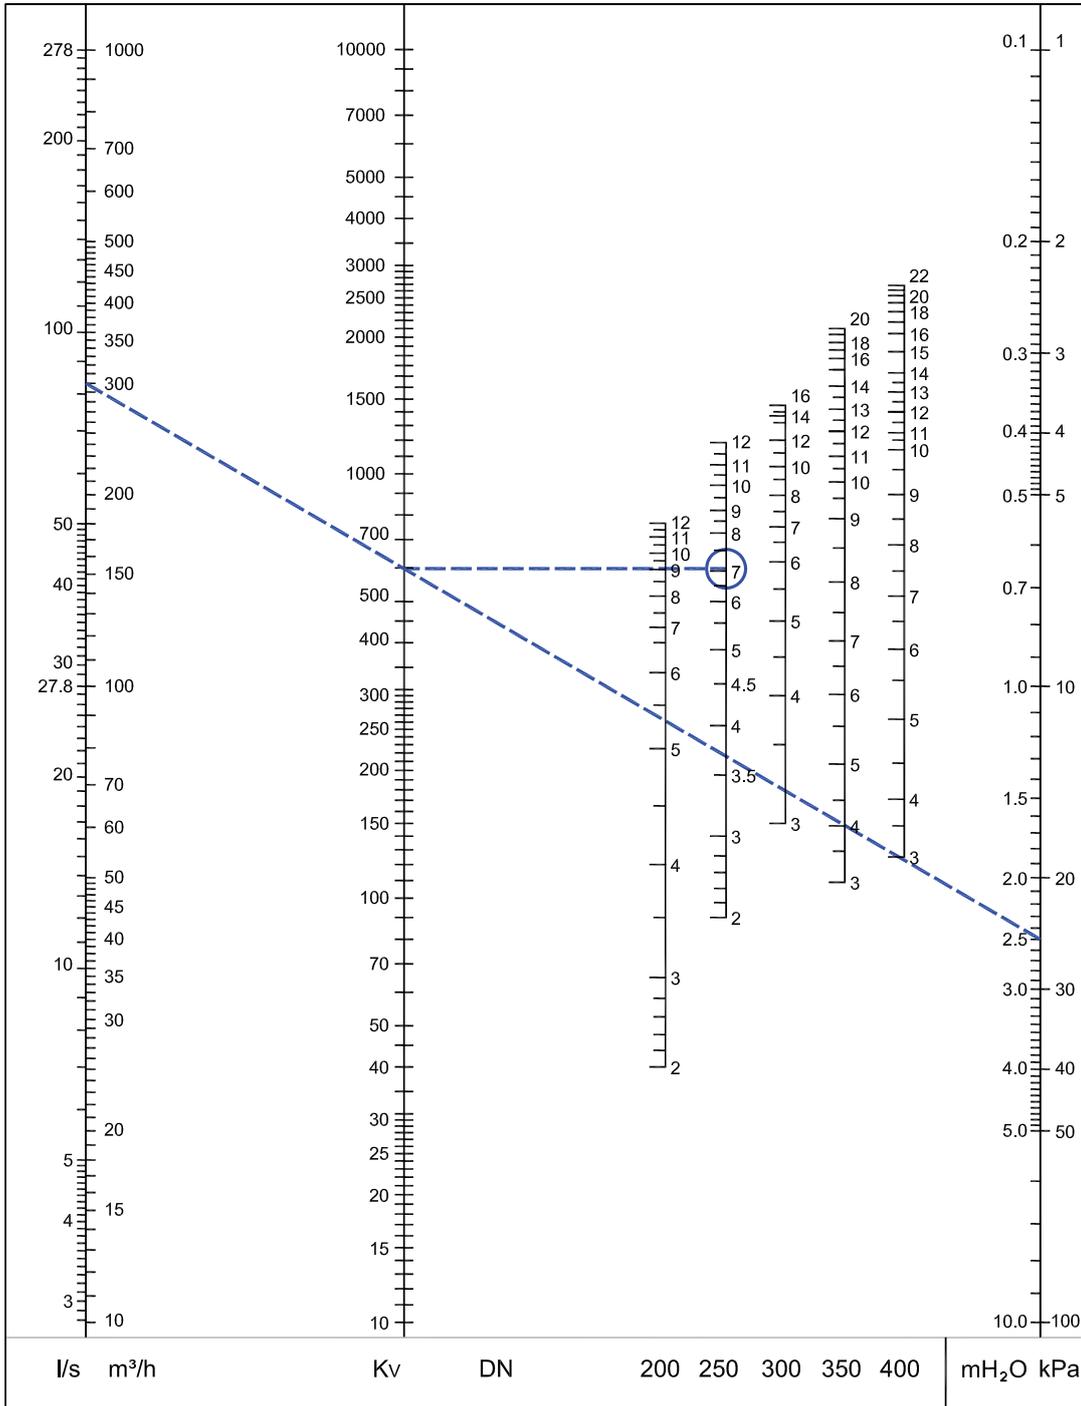


Recommended area: See Fig. 3 under "Measuring accuracy".

## Articles

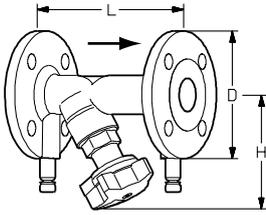

### Threaded bonnet

DN	(Size)	Number of bolt holes	L	H	D	Kvs	Kg	EAN	Article No
20	3/4"	4	150	100	105	5.7	2.3	7318792830600	52 182-920
25	1"	4	160	109	115	8.7	2.9	7318792830709	52 182-925
32	1 1/4"	4	180	111	140	14.2	4.3	7318792830808	52 182-932
40	1 1/2"	4	200	122	150	19.2	5.2	7318792830907	52 182-940
50	2"	4	230	122	165	33	6.6	7318792831003	52 182-950

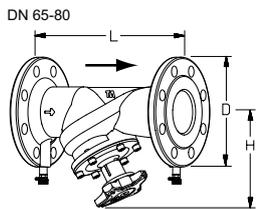


### Bolted bonnet

Spindle extension for DN 65-150 is included.

DN	(Size)	Number of bolt holes	L	H	H <sup>1)</sup>	D	Kvs	Kg	EAN	Article No
65	2 1/2"	4	290	163	223	180	85	10.0	5902276805288	52 187-965
80	3"	4	310	172	232	190	123	12.4	5902276805295	52 187-980
100	4"	8	350	223	283	230	185	17.9	5902276805301	52 187-990
125	5"	8	400	259	319	255	294	25.5	5902276805318	52 187-991
150	6"	8	480	273	333	280	400	35.0	5902276805325	52 187-992

1) Height with spindle extension

**NOTE:** In softwares (HySelect, HyTools) and balancing instrument (TA-SCOPE) the STAF-SG, DN 65-150, is named STAF-SG\*.

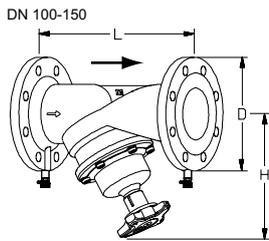

### Bolted bonnet

Measuring points on body


DN	(Size)	Number of bolt holes	L	H	D	Kvs	Kg	EAN	Article No
200	8"	8	600	430	345	765	76	7318792831607	52 182-993
250	10"	12	730	420	406	1185	122	7318792831706	52 182-994
300	12"	12	850	480	483	1450	163	7318792831805	52 182-995
<b>Not CE marked products (non-EU) *</b>									
350	14"	12	980	585	533	2200	297	7318793956903	52 182-996
400	16"	16	1100	640	597	2780	406	7318793957009	52 182-997

\*) **NOTE:** Not allowed to be installed in EU or EFTA countries.

→ = Flow direction


Kvs = m<sup>3</sup>/h at a pressure drop of 1 bar and fully open valve.

## Accessories

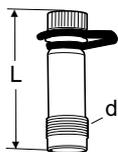


### Measuring point AMETAL®/EPDM

d	L	EAN	Article No
<b>DN 20-50</b>			
R1/4	39	7318792813108	52 179-009
R1/4	103	7318792814600	52 179-609
<b>DN 65-400</b>			
R3/8	45	7318792813009	52 179-008
R3/8	101	7318792814501	52 179-608

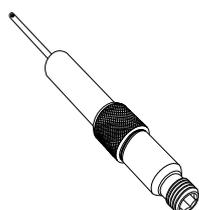


### Measuring point, extension 60 mm (not for 52 179-000/-601) Can be installed without draining of the system. AMETAL®/Stainless steel/EPDM

EAN	Article No
7318792812804	52 179-006

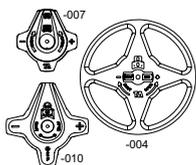

### Handwheel

DN	EAN	Article No
20-50	7318794043503	52 186-007
65-150	5902276808968	52 186-010
200-400	7318792835001	52 186-004

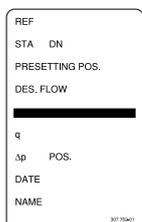


### Identification tag

EAN	Article No
7318792779206	52 161-990



### Allen key For locking of setting.


[mm]	For DN	EAN	Article No
3	20-150	7318792836008	52 187-103
5	200-400	7318792836107	52 187-105

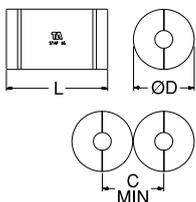

### Insulation

For heating/cooling  
Material: EPP  
Fire class: B2 (DIN 4102)  
Max working temperature: 120°C  
(intermittent 140°C)  
Min working temperature: 12°C,  
-8°C at sealed joints.

For DN	L	D	C	EAN	Article No
50	390	250	252	7318792840708	52 189-850
65	450	270	272	7318792840807	52 189-865
80	480	290	292	7318792840906	52 189-880
100	520	320	322	7318792841002	52 189-890
125	570	350	352	7318792841101	52 189-891
150	660	380	382	7318792841200	52 189-892

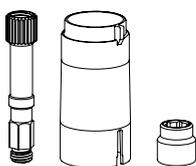

### Spindle extension

Spare part.  
Included in valves DN 65-150.  
Needed on DN 65-80 when using IMI TA  
prefab insulations (52 189-8xx).

For DN	EAN	Article No
65-150	5902276808951	52 186-015